

UNITEDSTATIONS

Tom Kent Radio Network Program-Associated Data

PAD/RDS information is available on the “PAD” serial port on XDS receivers.

PAD/ASYNC Serial Port Pinouts

Pin	Function
1	P0_TX
2	N/C
3	N/C
4	N/C
5	N/C
6	Ground
7	Ground
8	Ground
9	Ground

Pin	Function
1	P0_TX
2	P1_TX
3	P2_TX
4	P3_TX
5	N/C
6	Ground
7	Ground
8	Ground
9	Ground

Settings for data are 9600, 8, N, 1

Station must use the proper pin for the audio port on which they take the program (Applies to PRO4 receivers only. PRO1 receivers should always output to pin 1)

PAD Format

Title ¶ Artist ¶

(Where the ¶ symbol indicates a CR/LF)